






# INSTRUCTION



**SECON3L** 

# O-Series Membrane Button, Touch Pad

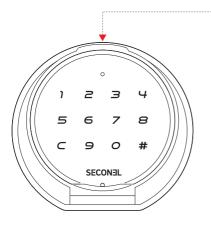

#### **Battery Housing Cover**

Pull the hook forward to open the battery case cover.







Safe Door Back

#### ★ How to loaded batteries?

Prior to using safe, install 4pcs of AA batteries. (LED flickers, Bi Bi Bi sound, Melody rings 1 second)

\* Non-alkaline and rechargeable batteries are not recommendable.



Batteries need to be replaced when 'Bi-ric' sound any button pressing. Replace all the batteries at a time.

- \* Battery life span: 1 year (Average openings 3 times a day)
- \* Even if batteries are replaced, the registered code is not erased.
- \* Note: If the door is not opened in spite of correct user code, please check batteries before calling for service.

# 1 How to open?

Factory Initial Code is 1 2 3 4.

- 1) Press(or Touch) "C (or Pad)"
- 2) Press(or Touch) " User Code "
- 3) Press(or Touch) "#"
- 4) Turn handle clockwise and open the door.



- \* CAUTION: If wrong code is tried, Red LED flickers sounding Bi Bi Bi.
- \* Paralysis: If wrong codes are tried over 5 times, the lock gets paralyzed 5 minutes.
  - OMB: Remaining paralysis time can be checked by LED.

In case of 4 minutes remaining, LED flickers 4 times every 10 seconds.

OTP: Remaining paralysis time can be checked by number on touch-pad.
Paralysis time appears 5-4-3-2-1 per minute.

#### 2 How to lock?

Close the door and turn handle counter-clockwise.

\* CAUTION: Don't close door with active bolts exposed.

# 3 How to enter user code? : Door open

- 1) Press(or Touch) " M " on the door back.
- 2) Press(or Touch) New Code (Over 4 digits up to 16 digits)
- 3) Press(or Touch) " # " (Melodic tone)



- \* CAUTION: 1) Prior to closing door, reconfirm as shown in [1. How to open] if [New code] registered correctly.
  - 2) Don't enter specific code such as telephone number, birthday, consecutive numbers for security reasons.

#### 4 Multi Mode & Dual Mode

- Multi Mode: Two users can independently open safe with each other's own user code.
- Dual Mode: Two different codes should be entered in a row for opening.
- \* Both modes can not be used simultaneously.

## 1) Multi Mode

- Set  $(M) \rightarrow (2) \rightarrow (\#) \rightarrow (2nd Code) \rightarrow (\#)$
- \* NOTE: 1) Prior to closing door, confirm as shown in 1. How to Open if New code registered correctly.
  - 2) 2nd code can be changed in the same way as (Multi Mode ▶ set).
  - 3) For setting or changing 1st code, please do as shown in 3. How to enter a user code?
- Unset  $M \rightarrow \# \rightarrow 2 \rightarrow \# \cancel{5}$
- \* NOTE: 1) If multi mode unsets, 2nd code is removed automatically.
  - 2) 1st code cannot be removed.
- Open C (Pad)  $\rightarrow$  1st Code or 2nd Code  $\rightarrow$  #  $\cancel{D}$   $\rightarrow$  Open the door

# 2) Dual Mode

- Set  $(M) \rightarrow (9) \rightarrow (\#) \rightarrow (2nd Code) \rightarrow (\#) \not$
- \* NOTE: 1) Prior to closing door, confirm as shown in 1. How to Open if New code registered correctly.
  - 2) 2nd code can be changed in the same way as Dual Mode ▶ set).
  - 3) For setting or changing 1st code, please do as shown in 3. How to enter a user code?
- Unset (M) → (#) → (9) → (#) Æ
- \* NOTE: 1) If dual mode unsets, 2nd code is removed automatically.
  - 2) 1st code cannot be removed.

## 5 Sound Hide

- Set
- M → 7 → #
- Unset
- $M \rightarrow \# \rightarrow 7 \rightarrow \#$

#### 6 Scramble Numbers

When opening a safe, scramble numbers can be put before and/or after the real code to avoid peeps. User code should be touched consecutively.

Ex) In case of user code 1-2-3-4, enter xxx1234, 1234xxx or xxx1234xxx.

\* 32 numbers are acceptable.

#### 7 Reset Function

- 1) Remove batteries.
- 2) Press(or Touch) " C (or Pad) " (Bi sound)
- \* Even after a reset, the registered code is not erased.



SECONIL 19 NoksanSandan 261Ro 60Gil Gangseo-gu Busan, Korea TEL+ 82 51 832 7770 FAX+ 82 51 832 7775 Email:info@seconel.co.kr www.seconel.co.kr

To improve products constantly, SECONEL reserves the right to alter the specifications without prior notice. Printed in Korea, Feb. 27, 2020