




INSTRUCTION



OTF

SECONEL

O-Series Touch-pad & Finger-print Lock

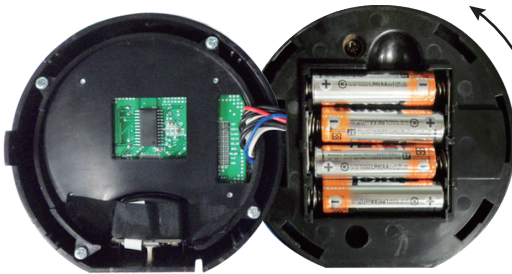


Battery Housing

Hold upper part and turn it counter-clockwise to open.
(1.5V AA Alkaline 4 pcs)

★ How to loaded batteries?

Prior to using safe, install 4pcs of AA batteries.

- * The batteries go 6 months if the door is opened 3 times a day.
- * In following cases, the batteries must be replaced. (1.5V AA Alkaline 4 pcs)

- 1) When touching the pad, **LobAtt** appears on FND.
- 2) The battery icon  appears on FND.
- 3) If the lock doesn't work in spite of normality on the pad.

* Even though batteries completely exhausted, the registered codes and finger-prints are not erased.

1 CODE

1) How to open?

Factory Initial Code is 1 2 3 4.

- 1) Touch **Pad** (Bi sound and Pad lighted)
- 2) Touch **User Code** (Pressing every code, Bi sound)
- 3) Touch **#** (Melody rings, **OPEnd** on FND)
- 4) Turn handle clockwise and open the door (Melody, within 3 seconds)

- * **NOTE** : 1) If a wrong code entered, bi-ric sound and **ErrOr** on FND.
2) If wrong codes entered 5 times, OTF paralyzes 5 minutes.

- * **PARALYSIS** : 1) No response against pad touch.
2) Paralysis Rest Time is indicated on FND as Min-Sec.
In case of paralysis rest time 4 minutes and 29 seconds, **4-29** indicated on FND.
3) After 5 minutes, paralysis gets released.

2) How to enter a user code? : Door open

- 1) Press **M** button on the door back (Bi sound).
- 2) Enter **New Code** (Over 4 digits up to 16 digits)
- 3) Touch **#** (Melody rings, **good** on FND)

- * **NOTE** : 1) Prior to closing the door, please confirm with **1-1. How to open?** if the **new code** registered correctly.
2) It is not recommended to enter the specific user code such as telephone number, birthday, consecutive number, and etc. for security reasons.

3) How to lock?


Close the door and turn handle counter-clockwise.

2 | FINGER PRINT

1) How to enter finger-print?

- 1) Press **M** button on the door back (Bi sound).
- 2) Touch **3** (Bi sounds).
- 3) Touch **#** (Bi sounds).
- 4) Touch **User Code** (Bi sounds).
- 5) Touch **#** (Blue light flickers).
- 6) Put **Finger-print three times** on sensor.
(Melody rings, **1st**, **2nd**, **Good** on FND).

 Please put user's finger on sensor while blue lamp flickering,



- * **NOTE** : 1) Please confirm with **2-2. How to open with finger-print?** if the finger-print correctly registered.
2) Worn-out finger-Print can't be entered.
- * 32 finger-prints are acceptable.

2) How to open with finger-print?

- 1) Touch **Pad** (Bi sounds and pad on, Blue light flickers).
- 2) Put **Finger-print** on sensor (Melody rings, **OPeNd** on FND).
- 3) Turn handle clockwise and open the door (Melody, within 3 seconds)

- * **NOTE** : 1) If a unregistered finger-print entered, bi-bi-bi sound and **ErrOr** on FND.
2) If wrong finger-Prints entered 5 times, OTF paralyzes 5 minutes.
- * **PARALYSIS** : 1) No response against pad touch.
2) Paralysis Rest Time is indicated on FND as Min-Sec.
In case of paralysis rest time 4 minutes and 29 seconds, **4-29** indicated on FND.
3) After 5 minutes, paralysis gets released.

3) How to delete registered finger-prints? : Door open

- 1) Press **M** button on the door back (Bi sounds).
- 2) Touch **#** (Bi sounds).
- 3) Touch **3** (Bi sounds).
- 4) Touch **#** (**CLEAR** on FND).

- * **NOTE** : If one finger-print is removed, all the registered finger-prints are erased simultaneously.

3 | MULTI MODE

- Two users can independently open safe with each other's own user code.
- * Multi mode and dual mode can not be used simultaneously.

1) How to set?

- 1) Press **M** button on the door back (Bi sound).
- 2) Touch **2** (Bi sounds).
- 3) Touch **#** (Bi sounds, **-----** on FND).
- 4) Enter **2nd Code** (Over 4 digits up to 16 digits)
- 5) Touch **#** (Melody rings, **good** on FND)

- * **NOTE :** 1) 2nd user code must be different from 1st code.
- 2) Prior to closing door, confirm as shown in **3-3. Multi mode ▶ Open** if **2nd Code** registered correctly.
- 3) 2nd code can be changed in the same way as **3-1. Multi mode ▶ Set**.
- 4) For setting or changing 1st code, please do as shown in **1-2. Code ▶ Enter User Code**.

2) How to unset?

- 1) Press **M** button on the door back (Bi sounds).
- 2) Touch **#** (Bi sounds).
- 3) Touch **2** (Bi sounds).
- 4) Touch **#** (**CLEAR** on FND).

- * **NOTE :** If multi mode unsets, 2nd code is removed automatically. 1st code cannot be removed.

3) How to open?

- 1) Touch **Pad** (Bi sounds and pad on).
- 2) Touch **1st User Code** or **2nd User Code** (Pressing every code, Bi sound)
- 3) Touch **#** (Melody, **OPEnd** on FND)
- 4) Turn handle clockwise and open the door (Melody, within 3 seconds)

4 | DUAL MODE (FINGER PRINT + CODE)

- Code and finger-print should be entered in a row for opening.
- * Dual mode and multi mode can not be used simultaneously.

1) How to set?

- 1) Press **M** button on the door back (Bi sound).
- 2) Touch **5** (Bi sounds).
- 3) Touch **#** (Melody rings, **FinGEr** on FND).
- 4) If there is no registered finger-print, put **Finger-print** on sensor. (Melody rings, **@ood** on FND).

- * **NOTE** :
- 1) Prior to closing door, confirm as shown in **4-3. Dual mode (Finger-print+Code) ▶ Open** if **Finger-print** registered correctly.
 - 2) Finger-print can be changed in the same way as **4-1. Dual mode (Finger-print+Code) ▶ Set**.
 - 3) For setting or changing user code, please do as shown in **1-2. Code ▶ Enter User Code**.

2) How to unset?

- 1) Press **M** button on the door back (Bi sounds).
- 2) Touch **#** (Bi sounds).
- 3) Touch **5** (Bi sounds).
- 4) Touch **#** (**CLEAR** on FND).

- * **NOTE** : Even though dual mode unsets, the registered finger-print are not erased.
If you don't want to use finger-print, please delete finger-print as shown in **2-3) How to delete registered finger-prints?**.

3) How to open?

- 1) Touch **Pad** (Bi sounds and pad on, Blue light flickers, **dUAL** on FND)
- 2) Put **Finger-print** on sensor (Melody).
- 3) Touch **User Code** (Pressing every code, Bi sound)
- 4) Touch **#** (Melody, **OPeNd** on FND)
- 5) Turn handle clockwise and open the door (Melody, within 3 seconds)

5 | DUAL MODE (CODE + CODE)

- Two different codes should be entered in a row for opening.
- * Dual mode and multi mode can not be used simultaneously.

1) How to set?

- 1) Press **M** button on the door back (Bi sound).
- 2) Touch **9** (Bi sounds).
- 3) Touch **#** (Bi sounds, **-----** on FND).
- 4) Touch **2nd Code** (Over 4 digits up to 16 digits)
- 5) Touch **#** (Melody rings, **gooo** on FND)

* NOTE : 1) 2nd user code must be different from 1st code.

- 2) Prior to closing door, confirm as shown in **5-3. Dual mode(Code+Code) ▶ Open** if **2nd Code** registered correctly.
- 3) 2nd code can be changed in the same way as **5-1. Dual mode(Code+Code) ▶ Set**.
- 4) For setting or changing 1st code, please do as shown in **1-2. Code ▶ Enter User Code**.

2) How to unset?

- 1) Press **M** button on the door back (Bi sounds).
- 2) Touch **#** (Bi sounds).
- 3) Touch **9** (Bi sounds).
- 4) Touch **#** (**CLEAR** on FND).

* NOTE : If dual mode unsets, 2nd code is removed automatically. 1st code cannot be removed.

3) How to open?

- 1) Touch **Pad** (Bi sounds and pad on, **dUAL** on FND)
- 2) Touch **1st User Code** (Pressing every code, Bi sound)
- 3) Touch **#** (Melody)
- 4) Touch **2nd User Code** (Pressing every code, Bi sound)
- 5) Touch **#** (Melody, **OPeNd** on FND)
- 6) Turn handle clockwise and open the door (Melody, within 3 seconds)

★ OTHER FEATURES

1) Code and Sound Hide

• **Set** **M** → **7** → **#** **HiDE** on FND

• **Unset** **M** → **#** → **7** → **#** **CLEAR** on FND

2) Scramble Numbers

When opening a safe, scramble numbers can be put before and/or after the real code to avoid peeps. User code should be touched consecutively. 32 numbers are acceptable including the real code.

Ex) In case of user code '1 2 3 4', enter 'xxx1234', '1234xxx' or 'xxx1234xxx'.

3) Reset Function

- 1) Remove batteries.
- 2) Touch **C** (Bi sound)

* Even after a reset, the registered codes and finger-prints are not erased.

SECONEL

19 NoksanSandan 261Ro 60Gil Gangseo-gu Busan, Korea
TEL + 82 51 832 7770 FAX + 82 51 832 7775
Email : info@seconel.co.kr www.seconel.co.kr

To improve products constantly, SECONEL reserves the right to alter the specifications without prior notice.
Printed in Korea, Feb. 26, 2020
